

Special Note

- Remove the plastic covering before using the Set-Top Box to provide normal ventilation.
- Use the power adapter provided with the Set-Top Box.

Service

Do not disassemble the device. Contact the service provider if the following problems occur:

- The power cable or power socket is damaged.
- There is any liquid leaks into the device.
- Fails to run normally even after following the instructions.
- The device is physically damaged.